

# LELO

## MOKA™ Originals



USER MANUAL

MOKA\_Originals\_PUB1\_0325

Experience clitoral and G-spot stimulation  
with MOKA™ Originals and its elegant design  
for unforgettable sensations.

**Enjoy it often, wisely and with care.**

Congratulations on acquiring MOKA™ Originals. Before getting more closely acquainted with it, please take a moment to look through this user manual.

## **IMPORTANT**

Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

## **SAFETY**

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

## **COMPLIANCE STATEMENT**

### **a. WARNING**

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the device and/or void any relevant warranties.

### **b. FCC and IC statements**

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

### **b. Déclarations de la FCC et de l'IC**

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.


Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

## NOTE

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
  - Increasing the separation between the device and receiver.
  - Connecting the device into an outlet on a circuit different from that to which the receiver is connected.
  - Consulting the seller, the device dealer or an experienced radio/TV technician for help.
  - The device has been evaluated to comply with general RF exposure requirements.
  - The device can be used in portable exposure conditions without restriction.
  - This device complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.
  - Users can obtain Canadian information on RF exposure and compliance.
- 
- Cet appareil ne doit pas être placé près d'une autre antenne ou d'un autre émetteur ou fonctionner conjointement avec ceux-ci.
  - L'appareil a été évalué pour répondre aux exigences générales d'exposition aux fréquences radio.
  - Il peut être utilisé dans des conditions d'exposition portable sans restriction.
  - Cet équipement est conforme aux limites d'exposition stipulées par IC RSS-102 pour un environnement non contrôlé.
  - Les utilisateurs peuvent obtenir des renseignements canadiens sur l'exposition aux fréquences radio et sur la conformité.

## GETTING TO KNOW YOUR MOKA™ Originals

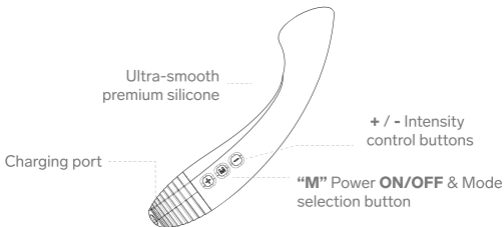

## HOW TO FIND FCC ID AND IC INFORMATION IN THE USER APP

- Open the "LELO™ app"
- Click "Menu"
- Click "Legal & Regulatory"
- Click "MOKA™ Originals"
- FCC ID: ZT5-ORIGINAL 4
- IC: 9798A-ORIGINAL 4
- HVIN: MOKA™ Originals
- PMN: Handheld massager

## USING YOUR KAYA™ ORIGINALS

LELO Originals have app lock to ensure your device is genuine, up-to-date, and safe to use. Once you unlock the device, you can choose whether to use the app or not.

### With the LELO™ app

- Charge your KAYA™ Originals for 2 hours before first use
- Download the LELO™ app for [iOS](#) or [Android](#), or scan the QR code on the box
- Press the power button (M) on the device — the LED will blink (pairing mode)
- Once you register and sign in the LELO™ app, choose the Originals series and connect your device
- Press the power button (M) again to confirm pairing
- Your device is now unlocked and ready to use with the app

#### Features in the app:

- 8 modes total (4 standard + 4 extra inside the app). Go to Settings to adjust modes and other preferences
- Tap Save to store your settings for offline use
- Set auto power-off to 10–20 minutes in the drop-down menu
- Battery level shows in the upper-left corner of the app

For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

### Without the LELO™ app

- Charge for 2 hours before first use
- You still need to unlock the device via the LELO™ app when you use it for the first time (see steps above)

### Once unlocked:

- Press + to turn it on
- Press (M) to change modes
- Use + and - to adjust intensity
- Press and hold (M) to turn off the device

### Travel Lock

- 5 Press and hold + and - buttons simultaneously for 3 seconds to lock or unlock the device for travel

## USING MOKA™ Originals

### How to hold



### Where to place on the body




Keep in mind that after 20 minutes of inactivity, MOKA™ Originals will initiate automatic shutdown to save battery.

**Travel tip:** To ensure your device is locked safely during travel, press and hold the + and - buttons for 3 seconds simultaneously to lock and unlock the device.

**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to MOKA™ Originals before and during use.

## CHARGING YOUR MOKA™ Originals

- Insert the DC plug into the DC port at the base of your MOKA™ Originals.
- Insert the mains plug into a USB Port. The LED on the interface of your MOKA™ Originals will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your MOKA™ Originals will emit a blinking white light.

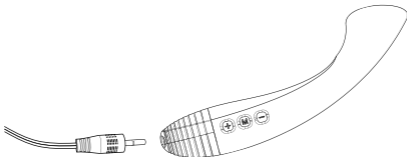

**Only use original chargers provided by LELO with your MOKA™ Originals.**

## **CLEANING, STORAGE, AND SAFETY**

Using MOKA™ Originals with hand creams or silicone-based lubricants may make the silicone permanently tacky.

MOKA™ Originals is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your MOKA™ Originals thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your MOKA™ Originals in direct sunlight and NEVER expose it to extreme heat.

Store your MOKA™ Originals in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

## TROUBLESHOOTING

**The LED on your MOKA™ Originals does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

**Your MOKA™ Originals does not activate when the M button is pressed:**

- The battery is empty. Recharge your MOKA™ Originals.
- The interface of your MOKA™ Originals is locked.  
Hold down + and – for 3 seconds.

If you experience any other problems with your MOKA™ Originals or if you have any questions regarding the operation, please contact:  
**[customercare@lelo.com](mailto:customercare@lelo.com)**

## SPECIFICATIONS

**Materials:** Body-safe silicone, ABS Plastic

**Finish:** Smooth

**Size:** 192 x 76 x 37 mm / 7.6 x 3 x 1.5 in

**Insertable length:** 116 mm / 4.6 in

**Weight:** 100 g / 3.5 oz

**Battery:** Li-Ion 200 mAh

**Charging:** up to 2 h at 5 V 200 mA

**Rated Power:**

- Input: 5 V 200 mA 1 W
- Output: 3.7 V 200 mA 0.74 W

**User time:** Up to 2 h

**Standby:** at least 90 days

**Frequency:** 93 Hz

**Max. noise level:**  $\leq$  63 dB

**Interface:** 3 buttons

## **REGISTER WARRANTY**

To activate your 1-year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](http://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](http://LELO.COM) and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



SERIAL NO.



IPX 7



MANUFACTURE DATE



FOLLOW INSTRUCTIONS FOR USE



ETICHETTA AMBIENTALE	
Categoria	Lettere guida per la raccolta
SCATOLA COLORATA	RACCOLTA CARTONGIO
SCATOLA DI CARTONE	RACCOLTA CARTONGIO
AVVIOIO IN ENR	RACCOLTA PLASTICA
RETEGA NON TESSUTO	RACCOLTA PLASTICA
RETEGA NON TESSUTO	RACCOLTA PLASTICA
RETEGA NON TESSUTO	RACCOLTA PLASTICA
MANUALE	RACCOLTA CARTA

Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address : <https://www.lelo.com/regulatory>

**DISCLAIMER:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2025 LELo AB. All rights reserved.

LELo AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELo USA Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

[www.lelo.com](http://www.lelo.com)