

LELO

TIANI™ Harmony



USER MANUAL

TIANI\_HARMONY\_PUB2\_0223\_EN



Congratulations on acquiring TIANI™ Harmony.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

## **IMPORTANT**

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

## **SAFETY**

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

## COMPLIANCE STATEMENT

### a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

### b. FCC statements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### c) IC statements

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 
## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
  - Increasing the separation between the equipment and receiver.
  - Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consulting the seller, the device dealer or an experienced radio/TV technician for help.
  - The device must not be co-located or operate in conjunction with any other antenna or transmitter.
  - The device has been evaluated to comply with general RF exposure requirements.
  - The device can be used in portable exposure conditions without restriction.
  - This device complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.
  - Users can obtain Canadian information on RF exposure and compliance.
- 
- Cet appareil ne doit pas être placé près d'une autre antenne ou d'un autre émetteur ou fonctionner conjointement avec ceux-ci.
  - L'appareil a été évalué pour répondre aux exigences générales d'exposition aux fréquences radio.
  - Il peut être utilisé dans des conditions d'exposition portable sans restriction.
  - Cet équipement est conforme aux limites d'exposition stipulées par IC RSS-102 pour un environnement non contrôlé.
  - Les utilisateurs peuvent obtenir des renseignements canadiens sur l'exposition aux fréquences radio et sur la conformité.

## GETTING TO KNOW YOUR TIANI™ Harmony

Dual action couples massager

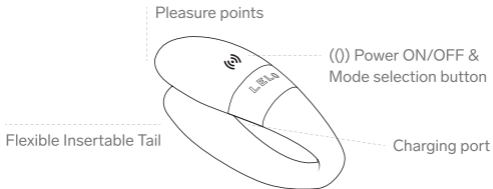

### HOW TO FIND FCC ID AND IC INFORMATION IN THE USER APP:

- Open the “LELO™ app”
- Click “Menu”
- Click “Legal & Regulatory”
- Click “TIANI HARMONY”
- FCC ID: ZT5-TIANIHARMONY
- IC: 9798A-LELOTIANI
- HVIN: TIANI™ Harmony
- PMN: Handheld massager

## USING YOUR TIANI™ Harmony

### HOW TO USE YOUR PRODUCT WITHOUT THE LELO™ APP

- Before the first use, charge your TIANI™ Harmony for 2 hours.
- The LED lights will go steady, showing the vibration level.
- Press the (( )) button to switch between the modes that will be set to 100% intensity.
- Press the center button for 3 seconds to turn it off.

### HOW TO USE YOUR PRODUCT WITH THE LELO™ APP

- Before the first use, charge your TIANI™ Harmony for 2 hours.
- **DOWNLOAD THE IOS / ANDROID version.**
- Press the (( )) button for 3 seconds to turn it on while activating the Bluetooth.
- All the LED lights will blink simultaneously, showing the Bluetooth pairing.
- Open the LELO™ app and locate the toy icon at the bottom of the screen. Find your TIANI™ Harmony and select "Connect". Press and hold the button on your device. Confirm the connection by pressing the button on your product again.
- Go to "MY LELO TOYS" and select "PLAY".
- Choose between 4 regular control modes - Manual, Screw, Shake, Swiping or 2 additional advanced modes - Finish Me Off and Out Of Control.
- Go to "SETTINGS" to set your device according to your preferences.
- Click the "SAVE" button at the bottom of your screen to save settings for offline use.
- Use the drop-down menu to set the default auto power off to 10-20 minutes. The battery level is in the upper left corner.

 
For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

## USING YOUR TIANI™ Harmony

### How to hold



### Where to place

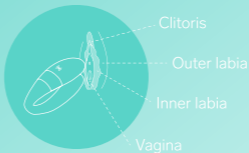


Keep in mind that after 20 minutes of inactivity, TIANI™ Harmony will initiate automatic shutdown to save battery.

**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to TIANI™ Duo Harmony before and during use.

## CHARGING YOUR TIANI™ Harmony

 - Insert the DC plug into the DC port at the base of your TIANI™ Harmony.
- Insert the mains plug into a USB Port. The LED on the interface of your TIANI™ Duo Harmony will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your TIANI™ Harmony will emit a blinking white light.

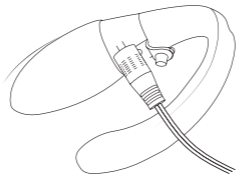

**Only use original chargers provided by LELO with your TIANI™ Harmony.**

## **CLEANING, STORAGE, AND SAFETY**

Using TIANI™ Harmony with hand creams or silicone-based lubricants may make the silicone permanently tacky.

TIANI™ Harmony is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your TIANI™ Harmony thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your TIANI™ Harmony in direct sunlight and NEVER expose it to extreme heat.

Store your TIANI™ Harmony in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

## TROUBLESHOOTING

**The LED on your TIANI™ Harmony does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check the wall and DC sockets.

**Your TIANI™ Harmony does not activate when the (()) button is pressed:**

- The battery is empty. Recharge your TIANI™ Duo Harmony.

If you experience any other problems with your TIANI™ Harmony or if you have any questions regarding the operation, please contact:

**[customercare@lelo.com](mailto:customercare@lelo.com)**

## SPECIFICATIONS

**Materials:** Body safe silicone, ABS Plastic

**Finish:** Smooth

**Size:** 45 x 30 x 90 mm / 1.8 x 1.2 x 3.5 in

**Weight:** 48 g / 0.11 lb

**Insertable length:** 85 mm / 3.35 in

**Battery:** 3.7V lithium battery with 200 mAh

**Charging:** up to 2 hours

**Rated Power:**

- Input: 5V 200mA 1W
- Output: 3.7V 230mA 0.85W

**User time:** Up to 2 hours. Every 20 minutes the device auto shuts down.

**Standby:** 90 days

**Frequency:** 208 Hz & 161 Hz

**Max. noise level:** < 60 dB

**Interface:** 1 button, 1 LED

## **REGISTER WARRANTY**

To activate your 2-year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://LELO.COM/SUPPORT).

## **2-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](https://LELO.COM) and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



SERIAL NO.



IPX 7



MANUFACTURE DATE



CLASS B DIGITAL APPARATUS



FOLLOW INSTRUCTIONS FOR USE



ETICHETTA AMBIENTALE		
Categoria	Lettere guida per la raccolta	
2	SCATOLA COLORATA	RACCOLTA CARTONGINO
2	SCATOLA DI CARTONE	RACCOLTA CARTONGINO
2	MOGOLIO IN ENR	RACCOLTA PLASTICA
2	SEMPRE NON TESSUTO	RACCOLTA PLASTICA
1	PIRELLI BOLLI PNEU	RACCOLTA PLASTICA
1	MANUALE	RACCOLTA CARTA

Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <http://www.lelo.com/regulatory>

**DISCLAIMER:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2026 LELo AB. All rights reserved.

LELo AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELo USA Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent

applications apply to this product:

visit <https://www.lelo.com/intellectual-property>

