


LELO

HUGO™ 2 Remote

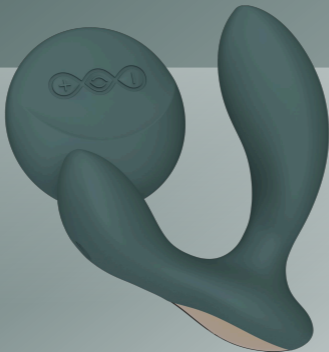

USER MANUAL

HUGO2Remote\_PUB1\_0423\_EN

Ideal for daring couples or solo players  
looking for a sensational approach to  
prostate orgasms.

**Enjoy it often, wisely and with care.**

Congratulations on acquiring HUGO™ 2 Remote. Before getting more closely acquainted with it, please take a moment to look through this user manual.

## **IMPORTANT**

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

## **SAFETY**

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This device should be used by people aged 18 years and over.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Minors should not clean and/or use the device unsupervised.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- 2 • Do not use the product if one or more components are damaged.

## COMPLIANCE STATEMENT

### a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

### b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

### b. Déclarations de la FCC et de l'IC

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada.

Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.

Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer or an experienced radio/TV technician for help.


- The device must not be co-located or operate in conjunction with any other antenna or transmitter.
  - The device has been evaluated to comply with general RF exposure requirements.
  - The device can be used in portable exposure conditions without restriction.
  - This device complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.
  - Users can obtain Canadian information on RF exposure and compliance.
- 
- Cet appareil ne doit pas être placé près d'une autre antenne ou d'un autre émetteur ou fonctionner conjointement avec ceux-ci.
  - L'appareil a été évalué pour répondre aux exigences générales d'exposition aux fréquences radio.
  - Il peut être utilisé dans des conditions d'exposition portable sans restriction.
  - Cet équipement est conforme aux limites d'exposition stipulées par IC RSS-102 pour un environnement non contrôlé.
  - Les utilisateurs peuvent obtenir des renseignements canadiens sur l'exposition aux fréquences radio et sur la conformité.

## GETTING STARTED

Before first use, charge your HUGO™ 2 Remote for 2 hours.

### INSERTING BATTERIES IN REMOTE

- The battery cover on the remote should be loose when you first open your product. Lift it off and insert the batteries as shown in Diagram 1.
- Carefully place the cover on top of the battery compartment, ensuring that the ridges are aligned as shown in Diagram 2.

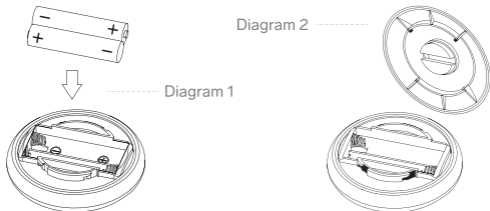

Once in place, insert the plastic key in the cover's slot and do a 10 degree twist clockwise to lock shut. To open, always use the key and make a 10 degree turn counterclockwise before replacing the batteries - using other tools such as coins may damage the surface of the remote (see Diagram 3).


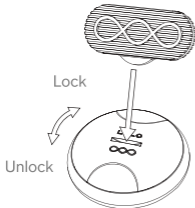


Diagram 3

**TIP:** You may also use flattened palms on either side of the remote to push and twist the lid without using the key to lock and unlock. Always ensure the remote is fastened shut before using in water.

## GETTING TO KNOW YOUR HUGO™ 2 Remote

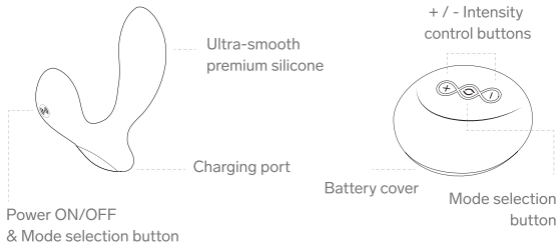

## USING YOUR HUGO™ 2 Remote WITHOUT REMOTE

- Before the first use, charge your HUGO™ 2 Remote for 2 hours.
- Press the (( )) button twice to turn it on.
- Press the (( )) button to switch between the modes.
- Press and hold the (( )) button to turn off.

## USING YOUR HUGO™ 2 Remote WITH REMOTE

- Unlock by pressing and holding the + and - buttons simultaneously for 3 seconds until the light turns on.
- Press the (( )) button on the product to turn it on.
- To turn the remote on, press the + button; press it again to increase the vibration strength.
- Press the (( )) button to switch between the six vibration patterns.
- Press - button to reduce vibration strength.
- Press and hold - the button to turn it off.

## USING HUGO™ 2 Remote

### HUGO™ 2 Remote



### How to hold



### Where to place




Keep in mind that HUGO™ 2 Remote will initiate automatic shutdown every 20 minutes to ensure the motor doesn't overheat if the product is misused.

**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to HUGO™ 2 Remote before and during use.


## USING SENSEMOTION™ MODE 1

Turn on your remote by pressing the + button. Once wireless connection is established, the lights on the massager and remote will be illuminated. Your massager will now be operating in SenseMotion™ mode 1. You can intensify vibrations by tilting the remote. When the remote is moved from horizontal to vertical position, vibration strength will increase to maximum level.




## USING SENSEMOTION™ MODE 2

When in SenseMotion™ mode 1, press on your remote to change to SenseMotion™ mode 2. In this mode, you can alter or intensify vibrations by moving the remote in any direction. Faster movements increase the intensity of vibrations.



## CHARGING YOUR HUGO™ 2 Remote

- Insert the DC plug into the DC port at the base of your HUGO™ 2 Remote.
- Insert the mains plug into a USB Port. The LED on the interface of your HUGO™ 2 Remote will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your HUGO™ 2 Remote will emit a blinking white light.

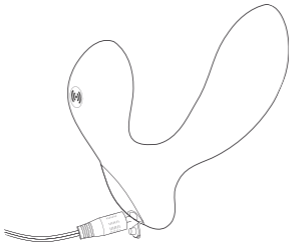

**Only use original chargers provided by LELO with your HUGO™ 2 Remote.**

## **CLEANING, STORAGE, AND SAFETY**

Using HUGO™ 2 Remote with hand creams or silicone-based lubricants may make the silicone permanently tacky.

HUGO™ 2 Remote is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your HUGO™ 2 Remote thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your HUGO™ 2 Remote in direct sunlight and NEVER expose it to extreme heat.

Store your HUGO™ 2 Remote in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

## TROUBLESHOOTING

**The LED on your HUGO™ 2 Remote does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

**Your HUGO™ 2 Remote does not activate when the (( )) button is pressed:**

- The battery is empty. Recharge your HUGO™ 2 Remote.
- The interface of your HUGO™ 2 Remote is locked. Hold down (( )) for 3 seconds.

If you experience any other problems with your HUGO™ 2 Remote or if you have any questions regarding the operation, please contact:

**[customercare@lelo.com](mailto:customercare@lelo.com)**

## SPECIFICATIONS

### MASSAGER

**Materials:** Body-safe Silicone, ABS Plastic

**Finish:** Smooth

**Size:** 104 x 107 x 41 mm / 4.09 x 4.2 x 1.6 in

**Insertable length:** 72 mm / 2.83 in

**Weight:** 157 g / 5.53 oz

**Battery:** Li-Ion 420 mAh 3.7 V

**Charging:** up to 2 h at 5.0 V 500 mA

**Rated Power:**

- Input: 5 V 2.1 W
- Output: 3.7 V 2.5 W

**User time:** up to 1 h

**Standby:** 90 days

**Frequency:**

- Vibration motor 1: 130Hz
- Vibration motor 2: 108Hz

**Max. noise level:** < 60 dB

14 **Interface:** 1 button

### REMOTE CONTROL

**Materials:** Body-safe silicone, ABS Plastic

**Size:** 64 x 64 x 26 mm / 2.5 x 2.5 x 1 in

**Weight:** 30 g / 0.07 lb

**Battery:** 2 AAA

**Interface:** 3-button

## **REGISTER WARRANTY**

To activate your 1-year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](https://LELO.COM) and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



RoHS



UK  
CA

FC



SERIAL NO.

SN

IPX 7



MANUFACTURE DATE



CLASS B DIGITAL APPARATUS



FOLLOW INSTRUCTIONS FOR USE



ETICHETTA AMBIENTALE	
Categoria	Luogo adatto per la raccolta
2 SCATOLA COLORATA	RACCOLTA CARTONGIO
2 SCATOLA DI CARTONE	RACCOLTA CARTONGIO
2 MAGGIO IN ENR	RACCOLTA PLASTICA
2 SPUGNA NON TESSUTA	RACCOLTA PLASTICA
1 PAVIMENTO IN PVC	RACCOLTA PLASTICA
MANUALE	RACCOLTA CARTA

Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <https://www.lelo.com/regulatory>

**DISCLAIMER:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2023/2024 LELOi AB. All rights reserved.

LELOi AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELO Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELO Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELO Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

[www.lelo.com](http://www.lelo.com)